

GEN 2.4 LOCATION INDICATORS

The location indicators marked with an asterisk (*) cannot be used in the address component of AFS messages.

ENCODE		DECODE	
Location	Indicator	Indicator	Location
Male' (AACC/FIC)	VRMF	VRMF	Male' (AACC/FIC)
Male' International Airport	VRMM	VRMM	Male' International Airport
Gan/ Gan Interantional Airport	VRMG*	VRMG*	Gan/ Gan International Airport
Hanimaadhoo	VRMH*	VRMH*	Hanimaadhoo
Kaadedhdhoo	VRMT*	VRMK*	Kadhoo
Kadhoo	VRMK*	VRMT*	Kaadedhdhoo

THIS PAGE INTENTIONALLY LEFT BLANK